



LOGO-EZ Quick Start

Please unpack the printer with care. Set the printer on a stable table. Please read the instruction manual in its entirety before setup process.

QUICK START

1. We really don't suggest a quick start. Better to read the entire user manual and review videos before doing ANYTHING.
2. Connect the power of the printer, and turn on the printer to make sure the printer can power on properly. Steps: First, turn on the total power, then turn on the red button of the printer, then press forward ,backward, up , down and pause button to check the printer is working properly. Power off the printer, and do the following:
3. Install the print driver on the computer. If you cannot install the driver on the computer, please check the CD and double check the correct driver for your computer operating system.
4. Fill the ink with CISS.
5. Normal boot.
6. Perform a head cleaning two times in order to make the ink flow smoothly from the big ink cartridges through tubes to the small ink cartridges. Remove the cap plugs to the ink tanks to allow proper air flow. You will re-plug them later once ink flow is proper.
7. Put a piece of paper on the top-left of the tray and perform a nozzle check to the paper? Is the nozzle check good? Perform again, if not.
8. If the nozzle check is good, let the tray fully back, then you can try to print now, notice all the settings of the RIP and the printing height.

NOTICE

1. Do not spill any ink or liquid into the print head by mistake when you fill or pump the ink or liquid, or do the manual head cleaning.
2. In order to better protect the print head, please check the printing height again visual inspection before printing.
3. Please turn off all powers before you check the circuit.
4. Do not let the printer crash into an object you are trying to print.

For technical support please reach out to Nexcopy.

www.nexcopy.com

support@nexcopy.com

Phone +1 949 481 6478 (PST)